

DiscPainter Firmware Updater for Windows


The printer drivers included with DiscPainter version 1.5 require a printer firmware update.

You must have the DiscPainter version 1.5 printer drivers installed and working BEFORE you can update the printer firmware.


The new firmware is version 1.1.1.111.


To update the firmware on Windows

1. Plug in the USB cable attached to the DiscPainter printer.
2. Unzip DiscPainterFirmwareUpdate-1.1.1.111.zip to a folder on your desktop.
3. Locate the folder and double-click **dfuu.exe** to run the update software.

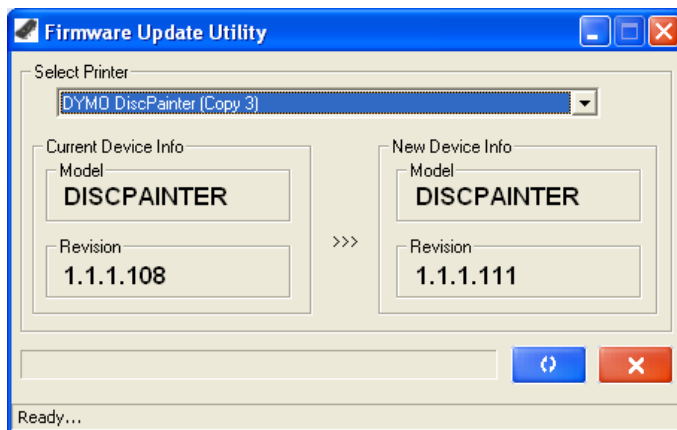


NOTE: The current revision number shown under Current Device Info for your printer may not be the same as shown in the example above.


4. Select the DiscPainter printer you are going to update from the **Select Printer** list.
5. Click  to begin the update.

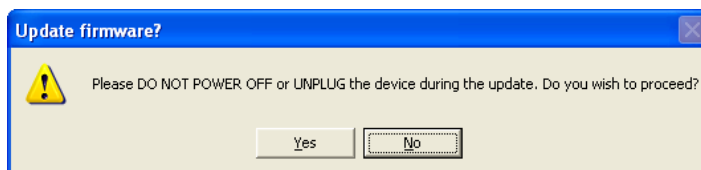

6. Click **Yes** in the Update Firmware dialog box to start the update.

The update progress is shown at the bottom of the dialog box.

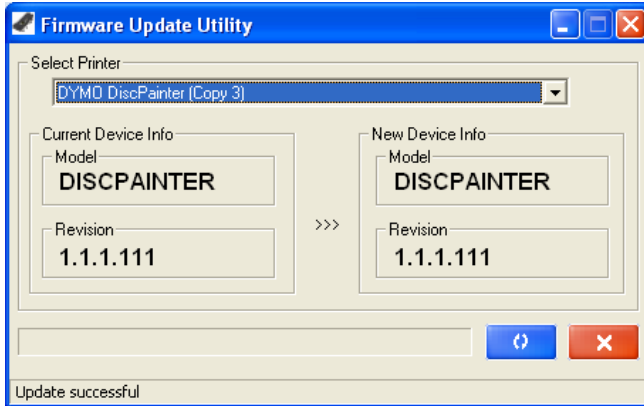

7. Click  when the Update successful message appears in the status bar at the bottom of the dialog box.

The update is complete.

For further assistance, contact Customer Support as follows:

- By email through the DYMO Web site: www.dymo.com/support
- By phone: 1-877-724-8324