

This Quick Reference gives you an overview of the features and functions of the DYMO RhinoPRO 5000 printer. For more detailed information on using your printer, refer to the *DYMO RhinoPRO 5000 User Guide*.





Function Keys

Function Key	Description
	Toggle power on and off.
	Navigate the label and menus.
	Add new line to label; select a menu option.
	Print label.
	Toggle CAPS on or off.
	Exit current activity.
	Select alternate function on keys.
	Toggle display backlight on and off.
	Delete character to left of cursor.
	Clear current label text & format.
	Add one space in label text.
	Select symbol characters.
	Select font size.
	Select language.
	Advance label tape 0.25" (6 mm).
	Adjust print quality.



 

Hot Keys

Hot Key	Steps
 Wrap-around label	<ol style="list-style-type: none"> 1. Enter starting text. 2. Press . 3. Select label type; then . 4. Press .
 Fixed-length label	<ol style="list-style-type: none"> 1. Enter text and press . 2. Press or , and then . 3. Press .
 Patch panel label	<ol style="list-style-type: none"> 1. Enter starting text. 2. Press . 3. Enter distance; then . 4. Press . 5. Enter # increments. 6. Press or .
 Terminal block label	<ol style="list-style-type: none"> 1. Enter starting text. 2. Press . 3. Enter distance; then . 4. Press . 5. Enter # increments. 6. Press or .
 Vertical label	<ol style="list-style-type: none"> 1. Enter label text. 2. Press ; then .
 Barcode	<ol style="list-style-type: none"> 1. Press + . 2. Choose type, and press . 3. Enter text for barcode () and then press . 4. Press .



 





Symbols

To add ...	Do this ...
Commonly used symbols	1. Press symbol key: 
Symbols from symbol table	1. Press  +  2. Select symbol; then press  .






 


 

 

Symbol Table

Row	Use arrow keys to select												
A	,	()	;	'	"	\	=	²	°	&	?	
B	←	→	↑	↓					*	_	@	±	

Memory

To ...	Do this ...
Save a label to memory	1. Press  2. Select location; then press  .
Recall a label from memory	1. Press  2. Select a label; then press  .
Clear memory location	1. Press  and select location. 2. Press  +  ; then  .

Printing

To print ...	Do this ...
Single label	1. Enter text; then press  .
Multiple copies of same label	1. Enter text. 2. Press  +  3. Enter # copies; then  4. Press  .
Serialized labels	1. Enter the text and numbers. 2. Press  or  to select letter or number to serialize. 3. Press  4. Press  or  to set increment; then  or  .

RhinoPRO Label Cassettes

The following industrial label cassettes are available for the RhinoPRO 5000 printer.

Material Type	3/8" (9 mm)	1/2" (12 mm)	3/4" (19 mm)	Length
Flexible Nylon White	—	18488	18489	11.5' (3.5 m)
Flexible Nylon Yellow	—	18490	18491	11.5' (3.5 m)
Permanent Polyester White	18482	18483	18484	18.0' (5.5 m)
Permanent Polyester Metallic	18485	18486	18487	18.0' (5.5 m)

DYMO Corporation
 44 Commerce Road
 Stamford, CT 06902-4561
 (203) 355-9000



© 2003 DYMO Corporation. All Rights Reserved.

No part of this document may be reproduced or transmitted in any form or by any means or translated into another language without the prior written consent of DYMO Corporation. RhinoPRO is a trademark of DYMO Corporation. DYMO is a registered trademark of Esselte Corporation. All other trademarks are the property of their respective holders.