LabelWriter Print Server

System Requirements

The print server requires a standard Ethernet connection and one of the following:

- Windows XP 32-bit
- Windows Vista 32 or 64-bit
- Mac OS X v10.3.9 or later (LabelWriter Duo requires Mac OS X v10.5 or later)

Installation

- 1. Connect the power adapter, network cable, and USB cable.
- 2. Install the LabelWriter Control Center software.
- 3. Configure the print server.
- 4. Add the printer to your computer.

Refer to the user guide for information on configuring the print server and adding a printer to your computer.