

DYMO[®]

LabelManager 210D+

User Guide

Copyright

© 2021 Newell Rubbermaid Europe, LLC. All rights reserved. Rev. 6/21

No part of this document may be reproduced or transmitted in any form or by any means or translated into another language without the prior written consent of Newell Rubbermaid Europe, LLC.

Trademarks

DYMO and LabelManager are registered marks in the US and other countries. All other trademarks are the property of their respective holders.

Contents

5 About Your New Label Maker

5 Product Registration

5 Getting Started

5 Connecting the Power

5 Inserting the Batteries

6 Connecting the Optional Power Adapter

6 Inserting the Label Cassette

6 Using the Label Maker for the First Time

7 Getting to Know the Label Maker

7 Power

7 LCD Display

8 Navigation Keys

8 Input Mode

8 CAPS

8 Shift

8 NEW

8 Backspace

8 Menu

9 Cancel

9 Print

9 Formatting Your Label

9 Changing the Font Size

9 Changing the Font Width

9 Adding Font Styles

10 Adding Borders and Underline Styles

10 Creating Two-Line Labels

10 Aligning the Text

10 Using Mirror Text

11 Using Symbols, Clip Art, and Special Characters

11 Adding Punctuation and Symbols

11 Adding Clip Art

11 Creating Fixed-Length Labels

11 Using the Label Maker Memory

12 Saving a Label

12 Opening Saved Labels

12 Caring for Your Label Maker

13 Troubleshooting

14 Symbols

15 Clip Art

16 Environmental Information

16 Electrical Ratings

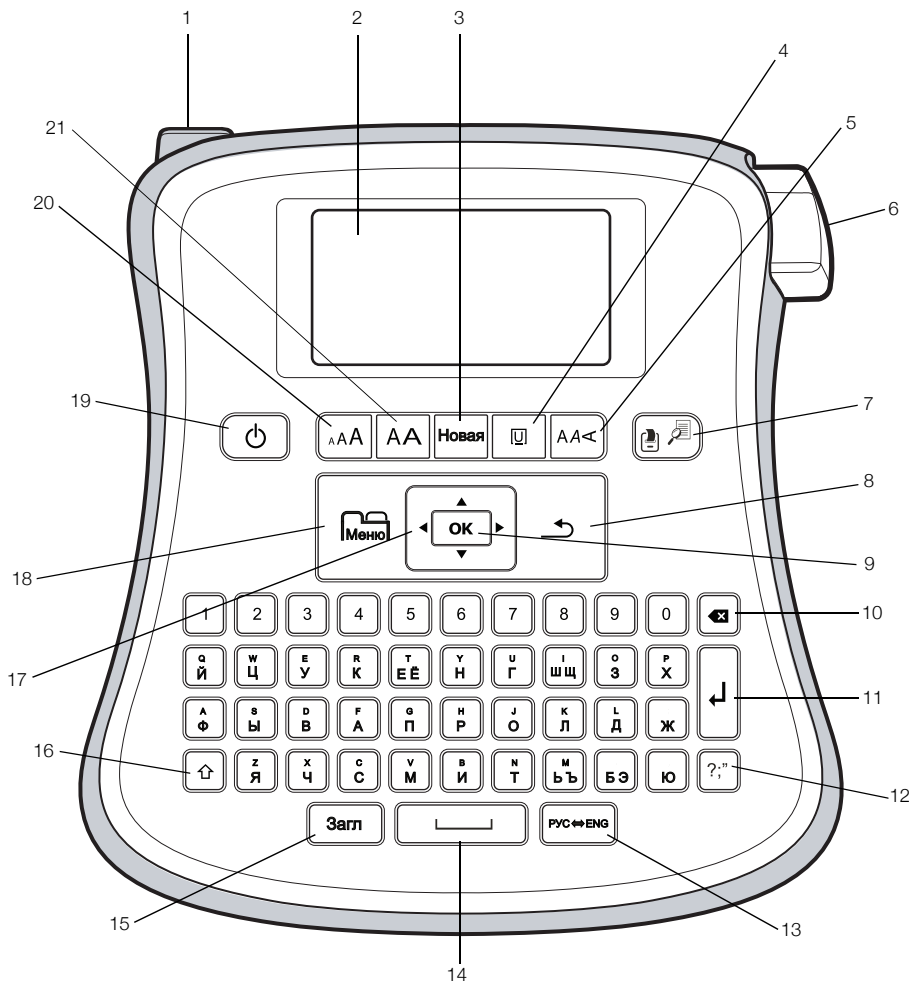


Figure 1 DYMO LabelManager 210D+ Label Maker

- | | | |
|-----------------------------|----------------------|----------------------|
| 1 AC power connector | 8 Cancel | 15 Caps |
| 2 LCD display | 9 OK | 16 Shift |
| 3 New label | 10 Backspace | 17 Navigation |
| 4 Underline/Boxes | 11 Return | 18 Menu |
| 5 Style | 12 Symbols | 19 On/Off |
| 6 Cutter button | 13 Input mode | 20 Font size |
| 7 Print | 14 Space bar | 21 Font width |

About Your New Label Maker

With the DYMO® LabelManager 210D+ electronic label maker, you can create a wide variety of high-quality, self-adhesive labels. You can choose to print your labels in many different font sizes and styles. The label maker uses DYMO D1 tape cassettes in widths of 6 mm, 9 mm, or 12 mm. These tape cassettes are available in a wide range of colors.

Visit www.dymo.com for information on obtaining labels and accessories for your label maker.

Product Registration

Visit www.dymo.com/register to register your label maker online. During the registration process, you will need the serial number, which is located inside the back cover of the label maker.

Getting Started

Follow the instructions in this section to print your first label.

Connecting the Power

The label maker is powered by standard batteries or an AC power adapter. To save power, the label maker automatically turns off after two minutes of inactivity.

Inserting the Batteries

The label maker uses six high-capacity AA alkaline batteries.

To insert the batteries

- 1 Slide the battery compartment cover away from the label maker. See Figure 2.
- 2 Insert the batteries following the polarity markings (+ and -).
- 3 Replace the cover.

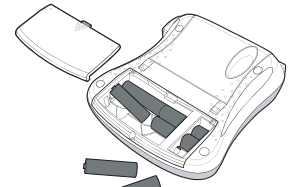


Figure 2



Remove the batteries if the label maker will not be used for a long period of time.

Safety Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.
- Remove the batteries if the printer will not be used for a long period of time.

Connecting the Optional Power Adapter


An optional 9 Volt, 2 Amp power adapter can also be used to power the label maker. Connecting the AC adapter to the label maker disconnects the batteries as a power source.

Use only power the adapter listed in this user guide:

Adapter model DSA-18PFM-09 Fc 090200 (note: “c” can be EU, UP, UK, US, UJ, JP, CH, IN, AU, KA, KR, AN, AR, BZ, SA, AF or CA) from Dee Van Enterprise Co., Ltd.


To connect the power adapter

- 1 Plug the power adapter into the power connector on the top, left side of the label maker.
- 2 Plug the other end of the power adapter into a power outlet.

 Make sure the label maker power is turned off before you disconnect the power adapter from the main power source. Otherwise, your most recent memory settings will be lost.

Inserting the Label Cassette

Your label maker comes with one label cassette. Visit www.dymo.com for information about purchasing additional label cassettes.

 The cutter blade is extremely sharp. While replacing the label cassette, keep fingers and other body parts away from cutter blade and do not press the cutter button.

To insert the label cassette

- 1 Lift the label cassette cover to open the tape compartment.
- 2 Insert the cassette with the label facing up and positioned between the guideposts. See Figure 3.
- 3 Press firmly until cassette clicks into place. See Figure 4.
- 4 Close the label cassette cover.

Each time you change the label cassette, you are prompted to enter the label width.

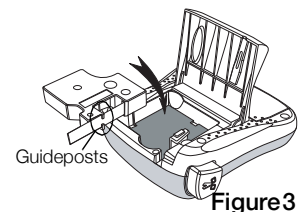


Figure 3

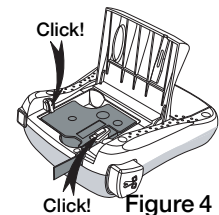



Figure 4

Using the Label Maker for the First Time


The first time you turn on the power, you are asked to select the language. This selection will remain set until you change it, or until the label maker is reset. You can change this selection in Settings.

To set up the label maker

- 1 Press  to turn on the power.
- 2 Select the language and press **OK**.
By default, the language is set to Russian.
- 3 Select inches or mm and press **OK**.
- 4 Select the width of the tape cassette currently in the label maker and press **OK**.

You are now ready to print your first label.

To print a label


- 1 Enter text to create a simple label.
- 2 Press .
- 3 Use the navigation keys to select the number of copies.
- 4 Press **OK** to print.
- 5 Press the cutter button to cut the label.

Congratulations! You printed your first label. Continue reading to learn more about the options available for creating labels.

Getting to Know the Label Maker

Become familiar with the location of the feature and function keys on your label maker. Refer to Figure 1. The following sections describe each feature in detail.


Power

The  button turns the power on and off. After two minutes of no activity, the power is switched off automatically. The last label created is remembered and displayed when the power is turned back on. The previously selected style settings are also restored.

LCD Display

You can enter up to 99 characters and spaces. The display shows about 13 characters at a time. The number of characters displayed will vary due to proportional spacing.

Feature indicators along the top and bottom of the LCD display appear black when a feature or setting is selected.

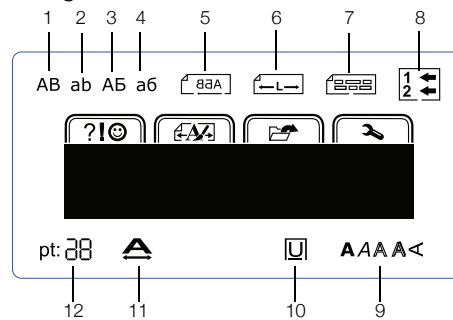

- | | |
|-------------------------------------|---------------------------|
| 1 Uppercase - English input | 7 Alignment |
| 2 Lowercase - English input | 8 Current line |
| 3 Uppercase - Cyrillic input | 9 Font style |
| 4 Lowercase - Cyrillic input | 10 Boxes/Underline |
| 5 Mirror | 11 Font width |
| 6 Fixed length | 12 Font size |

Navigation Keys

You can review and edit your label using the left and right navigation keys. You can move through menu selections using all four navigation keys, and then press **OK** to make a selection.


Input Mode

The **РУС↔ENG** key toggles between two character input modes: Cyrillic and Latin input. The default setting is Cyrillic input mode.

CAPS

The **3arr** key toggles between upper and lower case character entry. The default is lowercase. The setting you choose remains the same when you change input modes.



Shift

Pressing and holding the  key and then pressing a character, enters an uppercase character and when in uppercase or CAPS mode enters an lowercase character.



NEW


The **NEW** key clears the current text and formatting from the display, creating a new label.


 

 
Backspace

The  key deletes the character to the left of the cursor. Holding the  key deletes multiple characters.


Menu

The  key displays the Symbols/Clip Art, Format, Memory, and Settings tabs. Pressing the  key repeatedly scrolls through the tabs.

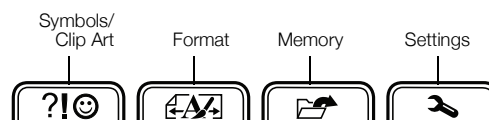



- Use the  symbols and clip art menu to insert symbols and clip art on your labels. You can also use the “?;” short cut key to add symbols. See **Adding Punctuation and Symbols** on page 11.
- Use the  format menu to set fixed label length, mirror text, or alignment.
- Use the  memory menu to open or save labels.
- Use the  settings menu to change the language, label width, and units of measure settings.

Cancel

The  key exits from a menu without making a selection or cancels an action, such as printing.

Print

The  key prints your label after asking you how many copies you want to print. The maximum number of copies you can print is 9.

Pressing  +  will display a preview of the label.

Formatting Your Label

You can choose from several format options to enhance the appearance of your labels.

Changing the Font Size

Five font sizes are available for your labels. The font size applies to all characters on a label.

The font sizes that you can use depend on the label width selected and whether a box or underline is added.

To change the font size

- ▶ Press **_AAA** until the desired font size is displayed.

Changing the Font Width

Two font widths are available: normal and wide.

To change the font width

- ▶ Press **AA** to toggle the font width from normal to wide.

Adding Font Styles

You can choose from six different font styles:

AaBb	Normal	AaBb	Outline
AaBb	Bold	AaBb	Shadow
<i>AaBb</i>	Italic	AaBb	Vertical


The style you select applies to all characters. Styles can be used with alphanumeric characters and some symbols.

To change the font style

- ▶ Press **AA<** until the desired font style is displayed.

Adding Borders and Underline Styles

You can highlight your text by choosing a border or underline style.

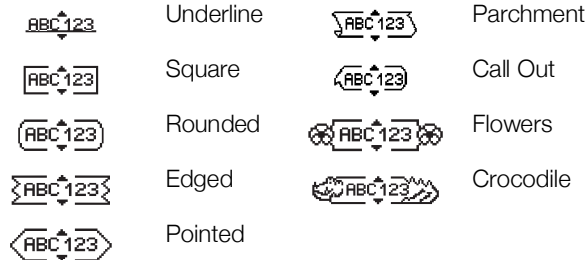

To add a box or underline

- ▶ Press  until the desired box or underline style is displayed and press **OK**.


 

A label can be underlined or enclosed within a box, but not both together.

When adding an underline on a two-line label, each line is underlined. When adding a box on a two-line label, both lines are enclosed in a single box.

Creating Two-Line Labels

You can print a maximum of two lines on a label. Only one line of text can be printed on 6 mm (1/4") labels.



To create a two-line label

- 1 Enter text for the first line and press .
- 2 Enter text for the second line. The  icon on the LCD indicates which line is currently displayed.
- 3 Press  to print.

Aligning the Text

You can align the text to print left or right justified on the label. The default alignment is centered.



To change the alignment

- 1 Press  until the  menu appears.
- 2 Use the navigation keys to select **Alignment** and press **OK**.
- 3 Select right, left, or centered alignment and press **OK**.

Using Mirror Text

The mirror format allows you to print text which reads from right to left, as you would see it in a mirror.

To turn on mirror text

- 1 Press  until the  menu appears.
- 2 Select **Mirror** and press **OK**.
- 3 Select one of the two options and press **OK**.


Using Symbols, Clip Art, and Special Characters

Symbols, punctuation, and clip art can be added to your labels.

Adding Punctuation and Symbols

The label maker supports punctuation and the extended symbol set shown on page 16.


To insert a symbol or punctuation

- 1 Press **?**;**”**.
You can also press  and select **Symbols** to view all the symbols available.
- 2 Use the navigation keys to select the desired image. Press **◀** or **▶** to move across a row; press **▲** or **▼** to move from row to row.
- 3 Press **OK** to add the symbol to your label.

Adding Clip Art

The label maker includes the clip art shown on page 15.

To insert clip art



- 1 Press .
- 2 Use the navigation keys to select **Clip Art** and press **OK**.
- 3 Use the navigation keys to select the desired image. Press **◀** or **▶** to move across a row; press **▲** or **▼** to move from row to row.
- 4 Press **OK** to add the image to your label.

Creating Fixed-Length Labels

Normally, the length of the label is determined by the length of the text. However, you can choose to set the length of the label for a specific application.

If the text you entered does not fit within the fixed label length, a message is displayed showing the smallest possible label length for this text. You can choose a fixed length label from 1.5" (40 mm) up to 15" (400 mm) long.

To set the label length

- 1 Press  until the  menu appears.
- 2 Use the navigation keys to select **Length** and press **OK**.
- 3 Select **Fixed** and press **OK**.
- 4 Set the length for your label and press **OK**.



Using the Label Maker Memory

The label maker has a powerful memory feature that allows you to save the text of up to nine frequently-used labels. You can recall saved labels and you can insert saved text into a label.

Saving a Label

You can save up to nine frequently-used labels. When you save a label, the text and all formatting are saved.

To save the current label



- 1 Press  until the  menu appears.
- 2 Use the navigation keys to select **Save** and press **OK**.
The first available memory location is displayed.
- 3 Use the navigation keys to move through the locations.
You can store new text in any of the memory locations.
- 4 Select a memory location and press **OK**.

Your label text is saved and you are returned to the label.

Opening Saved Labels

You can easily open labels saved in memory to use at a later time.

To open saved labels

- 1 Press  until the  menu appears.
- 2 Use the navigation keys to select **Open** and press **OK**.
The first memory location is displayed.
- 3 Use the navigation keys to select a label to open and press **OK**.
If the display currently contains label content, a message is displayed to confirm you want to overwrite the current label.

Caring for Your Label Maker

Your label maker is designed to give you long and trouble-free service, while requiring very little maintenance. Clean your label maker from time to time to keep it working properly. Clean the cutter blade each time you replace the tape cassette.



Cutter blade is extremely sharp.

To clean the cutter blade

- 1 Remove the tape cassette.
- 2 Press and hold the cutter button to expose the cutter blade. See Figure 5.
- 3 Use a cotton ball and alcohol to clean both sides of the blade.

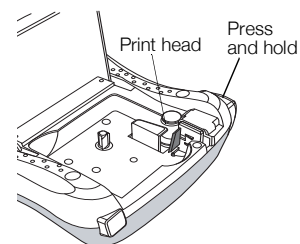



Figure 5

Troubleshooting

Review the following possible solutions if you encounter a problem while using your label maker.

Problem/Error Message	Solution
No display	<ul style="list-style-type: none">■ Ensure the label maker is turned on.■ Replace discharged batteries.
Poor Print Quality	<ul style="list-style-type: none">■ Replace batteries or attach power adapter.■ Ensure label cassette is installed properly.■ Replace the label cassette.■ Clean the print head. Contact Customer Support for instructions at http://support.dymo.com
Poor Cutter Performance	Clean the cutter blade. See Caring for Your Label Maker .
Printing . . .	No action required. Message disappears when printing is finished.
Too many characters Exceeded maximum number of characters in buffer.	Delete some or all of the buffer text.
Too many lines Exceeded maximum number of lines	<ul style="list-style-type: none">■ Delete a line to fit on the tape width.■ Insert a wider label cassette.
 Batteries almost discharged.	Replace batteries or connect AC power adapter.
Tape Jam Motor is stalled due to label jam.	<ul style="list-style-type: none">■ Remove jammed label; replace label cassette.■ Clean cutter blade.

If you still need assistance, contact DYMO Customer Support at <http://support.dymo.com>.

Symbols

Position in row				
°	\	«	»	
!	?	¡	¿	—
'	"	,	.	;
'	:	/	\	
¥	\$	¢	£	€
@	&	#	%	‰
§	•	¶	°	∞
+	-	*	÷	√
^	~	≈	=	≠
±	<	>	≤	≥
[]	½	¼	¾
()	{	}	⅓
0	1	2	3	4
5	6	7	8	9
°	1	2	3	4
5	6	7	8	9
α	β	γ	δ	ε
ζ	η	θ	ι	κ
λ	μ	ν	ξ	ο
π	ρ	σ	τ	υ
φ	χ	ψ	ω	
Α	Β	Γ	Δ	Ε
Ζ	Η	Θ	Ι	Κ
Λ	Μ	Ν	Ξ	Ο
Π	Ρ	Σ	Τ	Υ
Φ	Χ	Ψ	Ω	

Clip Art


©	®	™	CE	♻️
↑	↓	➔	➔	↔
↑	↓	🚫	🧑	✂️
🕒	📅	🚫	♥️	🌸
👉	👉	👉	👍	👎
🚫	🧑	♿	🧑	🚫
🧑	📞	📖	↑↑	🍷
☠️	🔥	☠️	⚠️	✍️
📧	☔	✉️	✈️	🚩
📁	📁	📄	📄	📱
🔋	📶	📢	☀️	🖨️
🖱️	💻	📊	🔒	💰
🏆	⌚	📌	🔧	📣
📷	🎬	♿	🧑	🧑
🎵	🎵	📺	✓	✗
😊	😞	😐	☕	🍲
🧀	🍷	🍌	🍏	📍
🔨	🔸	🔪	🔪	🚗
🚚	🚚	🏭	🚲	🚲
🚤	🏊	⚽	🏈	⚾
🏠	🏠	🏊	🏊	🕷️
🐱	🐶	🐦	🐦	🐎
🐱	🐱			

Environmental Information

The equipment that you have bought requires the extraction and use of natural resources for its production. It may contain substances that are hazardous to health and the environment.

In order to avoid the dissemination of those substances in our environment, and to diminish the pressure on natural resources, we encourage you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials of your end-of-life equipment in an environmentally sound way.

The crossed-bin symbol marked on your device indicates you should use these systems.

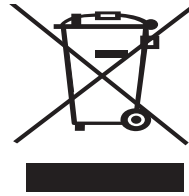

If you need more information on the collection, reuse, and recycling of this product, please contact your local or regional waste administration.

You can also contact DYMO for more information on the environmental performance of our products.

Electrical Ratings

Printer Power Rating	Input: 9VDC, 2.0A
Power Adapter Rating	Input: 100-240Vac 50/60Hz 0.6A Output: 9VDC 2.0A
